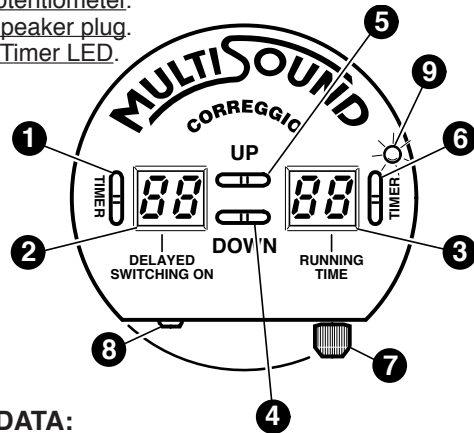 


ACTIVATING THE QUAIL CALLING DEVICE (fig. A):

- 1 - Timer key on the left.
- 2 - Display on the left: displays the hours of delay from switching on (from 8 to 18) or the **CH** mark for channels.
- 3 - Display on the right: indicates the running time (from continuous to 24 hours) or the number of the selected channel.
- 4 - Down Key: selects the channels or the hours of the downwards timer.
- 5 - Up Key: selects the channels or the hours of the upwards timer.
- 6 - Timer key on the right.
- 7 - Volume potentiometer.
- 8 - External speaker plug.
- 9 - Activated Timer LED.

fig. A


**TECHNICAL DATA:**

- Max power: **30 Watt** (1 horn) - **60 Watt** (2 horns)
- Absorption: **500 mA** (1 horn) - **1 A** (2 horns)
- 20 mA** (stand by)
- Power supply: **12 V battery**
- Weight: **500 gr.**

SELECTING THE CHANNELS:

On switching on, the two displays (2 and 3) show the last entered channel (fig. B). If no key is pressed, after a minute the displays will switch off. If you wish to change channel before the LED's are off, press the Up Key (5) for going upwards or the Down Key (4) for going downwards. After changing the channel, its number will be displayed for 10 seconds, after which the values for **Delayed switching on** (2) and **Running time** (3) will be shown on the displays for a minute, after which, if no key is pressed, both displays will switch off. If you wish to change channel with switched off displays, you must press the Up Key (5) for going upwards or the Down Key (4) for going downwards. By pressing once on the key, the previously selected channel will be displayed; each new pressure will change the value and the basic sequence will restart, or after changing the channel its number will be displayed for 10 seconds, after which the values for **Delayed switching on** (2) and **Running time** (3) will be shown on the displays for a minute, after which, if no key is pressed, both displays will switch off.

fig. B

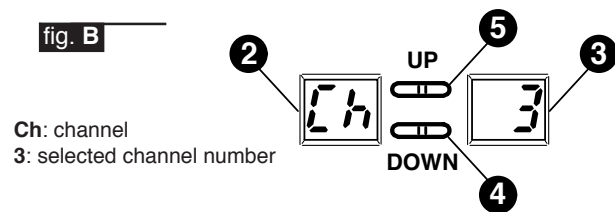

Ch: channel
3: selected channel number

LIST OF CHANNELS:

- | | |
|-----------|--|
| 1 Quail 7 | 4 Quail calling device |
| 2 Quail M | 5 Continuous sequence: |
| 3 Quail F | continuous, non-stop playback of calls |
| | 6 Random (Green LED on): |
| | random playback of calls with pauses of different length |

If the timers are not programmed, the Quail Calling Device will operate non-stop until the battery is exhausted.

ENTERING THE DELAYED SWITCHING ON:

Select the Delayed Switching on function by pressing the Timer key on the left (1); the two displays will switch on as shown on Dwg. C1.

Press again the Timer key on the left (1) for selecting the Delayed Switching on Timer (2) which will switch on as shown on Dwg. C2.

Press the Up Key (5) or Down Key (4) until the display shown the desired hours of delay (see example C3).

ENTERING THE RUNNING TIME:

Select the **Running time** function by pressing the Timer key on the right (6); the two displays will switch on and indicate the previously entered delayed switching on in the one on the left (2) and **CO** (continuous) in the one on the right (3) (fig. D1).

For changing the running time, press again the Timer key on the right (6) for selecting the timer on the right and, with the Up (5) and Down (4) keys, select the desired running time (see example D2).

After entering the two values, the sound will switch off after 10 seconds, and the two displays will switch off after a minute. A red LED will confirm the process.

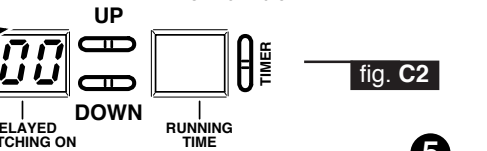
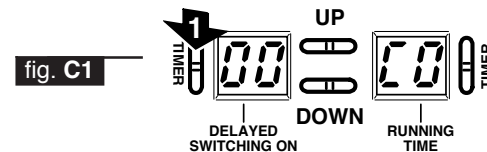


fig. C3

Example C3: the quail calling device switches on after 5 hours from the moment of entering and works non-stop.

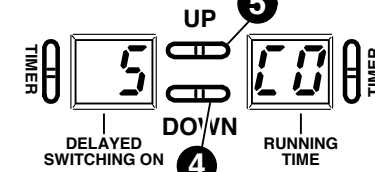


fig. D1


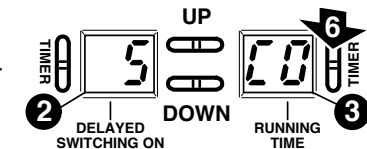


fig. D2




Example D2: the quail calling device switches on after 5 hours and works 12 hours from the moment of entering.

Unless the battery is disconnected, in the following days the device will repeat the same cycle by switching on and off at the entered times. In the hours of attended the red led flashes.

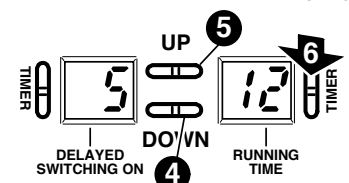

MULTISOUND

GB Mod. 30/TM

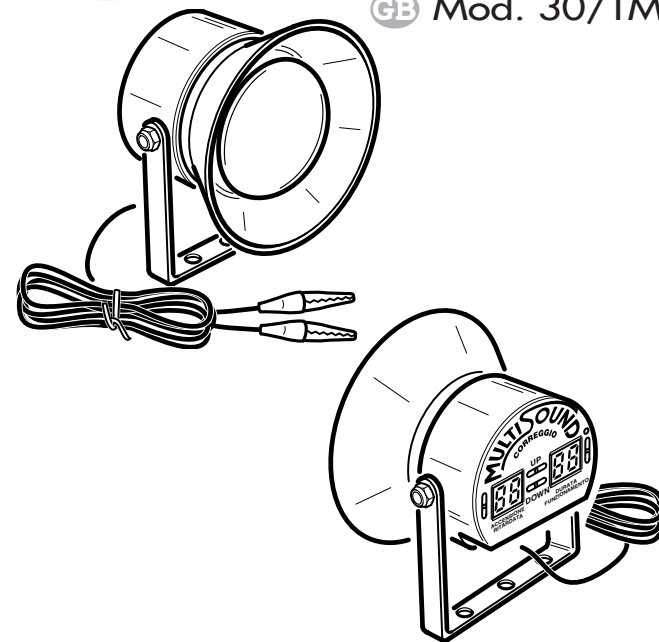

MULTISOUND s.n.c.

P.le Resistenza, 8 - 42015 Correggio (RE) - ITALY
Tel. e Fax 0522 694929
e-mail: info@multisound.it - www.multisound.it